

FENIX 200ACL

Rockwell | Brinell Hardness Tester

USER **MANUAL**



USER **MANUAL**

FENIX 200ACL

Rockwell | Brinell Hardness Tester

Thank you for buying this advanced INNOVATEST® hardness testing instrument.

The product meets the applicable DIN, ISO-EN, ASTM and JIS standards.

Products and/or product specifications can change due to new technologies and continuous development.

We reserve the right to change or modify specifications of products without prior notice.

INNOVATEST Europe BV assumes no responsibility or liability for any errors or omissions in the content of this instructions.

Please contact our sales office for up-to-date information.

INNOVATEST Europe BV

Borgharenweg 140
6222 AA Maastricht
The Netherlands
Phone: +31 43 3520060
Fax: +31

Table of Contents

1.	INTRODUCTION	7	6.	PROBLEM MESSAGES	29
1.1	General instructions	7	7.	MAINTENANCE	30
1.2	Target groups	8	7.1	Cleaning	30
1.3	Liability and disclaimer	8	7.2	Maintenance general	31
1.4	Re-order	8	7.2.1	Periodical inspection	32
1.5	Copyright	8	7.3	Replacement of the fuse(s)	33
1.6	Intended use	9	7.4	Spare parts	33
1.7	Improper use	9	7.5	Functional test	34
1.8	Layout of the user manual	9	7.6	Adjustment of the Hardness value display	34

